




Kia EV6 GT
MPV, 5doors
From March 2023

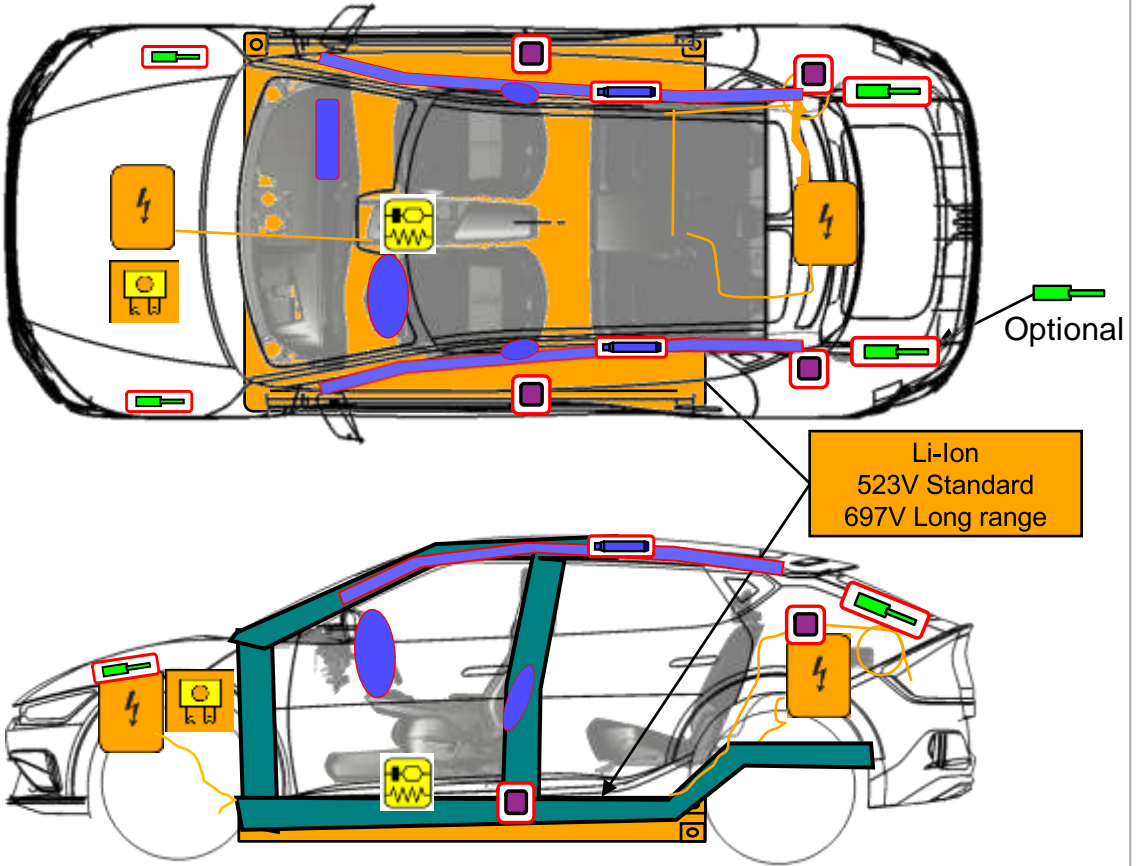


Reserved for holes (paper version)

| | | | | | | | | | |
|--|--------------------------------------|--|------------------------------|--|---|--|----------------------------------|--|-------------------------------------|
| | Airbag | | Stored gas inflator | | Seat belt pretensioner | | SRS control unit | | Pedestrian protection active system |
| | Automatic rollover protection system | | Gas strut / Preloaded spring | | High strength zone | | Zone requiring special attention | | High voltage component |
| | Battery low-voltage | | Ultra-capacitor, low voltage | | Fuel tank | | Gas tank | | Safety value |
| | Battery pack, high-voltage | | High voltage power cable | | High voltage device that disconnects high voltage | | Fuse box disabling high voltage | | High voltage ultra capacitor |

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

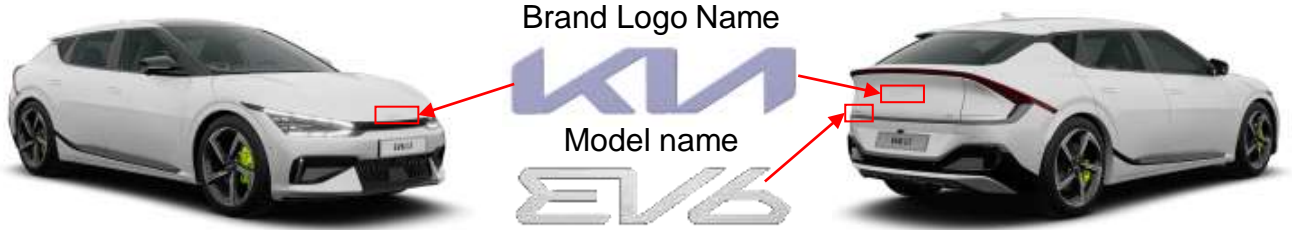

2. Immobilisation / stabilisation / lifting

Immobilization:

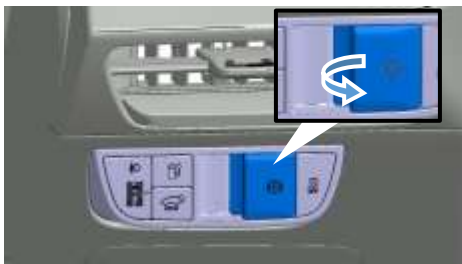


1. Chock the wheels and pull the switch to set the parking brake.



2. For automatic transmission vehicles, shift into park (P) gear.

Lifting points under the vehicle:

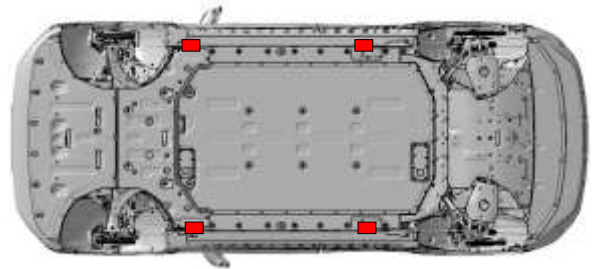

3. Disable direct hazards / safety regulations



IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW



HV-battery:



Access:



Pull up the yellow lever in the high voltage cut-off switch

Pull the release lever

Raise the hood

Open cover of the fuse box in the engine compartment



12V Battery:



Access: →



Pull the release lever

 


Raise the hood



Battery in the engine compartment

Disabling:



4. Access to the occupants

Steering column adjustment:



Door handle:




When the door outer handle doesn't pop-out, push the front side inwards.

Seat adjustment:




MANUAL

Glass:

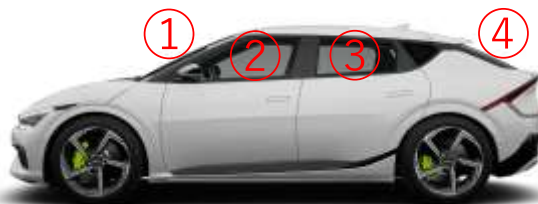

1. Laminated
2. Tempered/ Laminated (OPT)
3. Tempered
4. Tempered

Vehicle body:

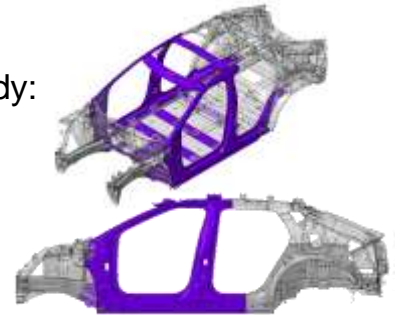

Hardened Steel: 100k↑

5. Stored energy / liquids / gases / solids

| | | | |
|--|--|--------------|--------------------------|
| | | 12V | |
| | | 523V 697V | R-134a 800g 900g |
| | | | R-1234yf 750g 850g |
| | | | |

WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA


6. In case of fire




Use large amount of water



BATTERY RE-IGNITION!

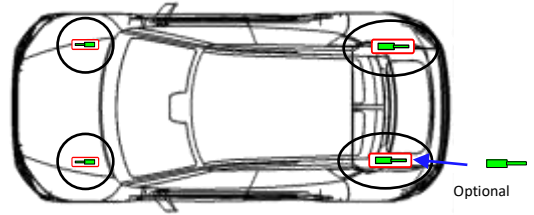

Gas strut!

 

Risk of missile effect of hood and tailgate.

7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




8. Towing / transportation / storage

OK

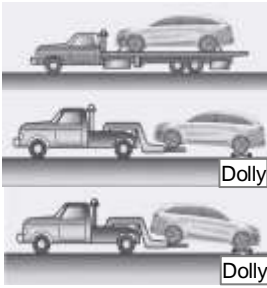

Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK

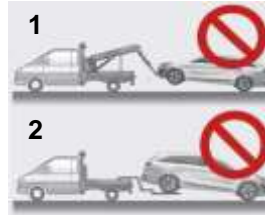

Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).



10. Explanation of pictograms used

| | | | | | |
|--|-----------------------------|--|----------------------------------|--|--------------------------|
| | Electric Vehicle | | Warning, Electricity | | Bonnet |
| | General warning sign | | Air-conditioning component | | Boot |
| | Corrosives | | Hazardous to the human health | | Flammable |
| | Explosive | | Acute toxicity | | Environmental hazard |
| | Use thermal Infrared camera | | Use water to extinguish the fire | | Warning; low temperature |