


KIA Picanto

Hatchback, 5 door From September 2023







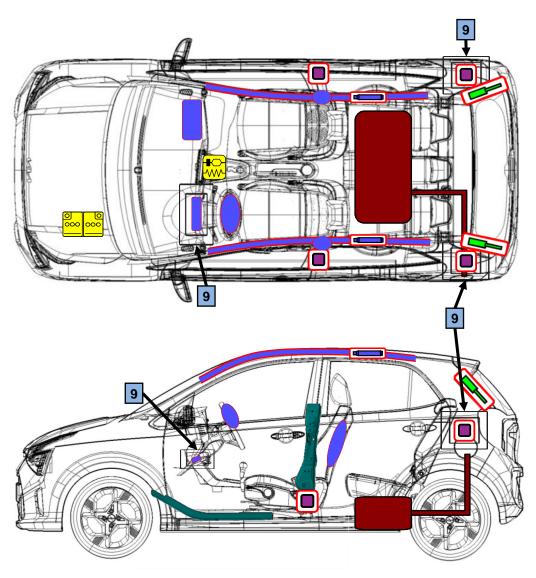

	Airbag	Stored gas inflator	Seat belt pretensioner	SRS control unit	Fuel tank
000 000	Battery low- voltage	Gas strut / Preloaded spring	High strength zone	Zone requiring special attention	

 ID No.
 Version No.
 Version date:
 Page

 KNA-JA1-RS-I-1-202404
 01
 2024
 1 of 4

1. Identification / recognition



Brand Logo Name



Model name


PICANTO

2. Immobilisation / stabilisation / lifting

Immobilization:




Pull up the parking brake as far as possible

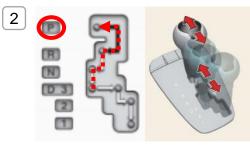

If automatic transmission: move shift lever to parking position (P)



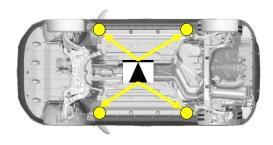

3. Disable direct hazards / safety regulations

Low Voltage 12V battery: 2





Access:



Pull the release lever to unlatch the hood.



Raise the hood slightly, push the secondary latch up (1) inside of the hood center and lift the hood (2)



Disabling:



Turn the ignition switch off



Access to battery shown above



Disconnect the negative(-) terminal



Disconnect the positve(+) terminal

ID No. KNA-JA1-RS-I-1-202404


Version No.

Version date: 2024

Page 2 of 4


4. Access to the occupants

Steering column adjustment:

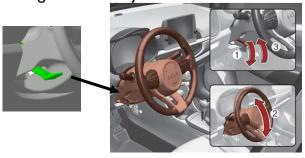

Seat adjustment:



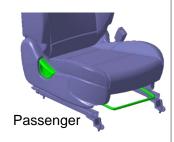

Glass:






Vehicle body:	1

1	Laminated		
2,3,4	Tempered		

5. Stored energy / liquids / gases / solids





R-134a R-1234y 400g 400g





WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA



6. In case of fire



BATTERY RE-IGNITION!






Gas strut!



Risk of missile effect of hood and tailgate.

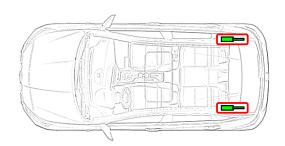

7. In case of submersion




Do not touch any of the 12V components or cables, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




8. Towing / transportation / storage



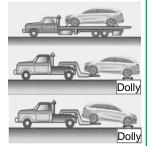

Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK




Notice: Do not tow with slingtype equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Front



Rear

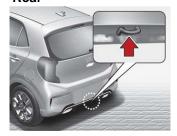

Towing hook is located in the tool case in the tailgate

9. Important additional informations



Optional equipped with Driver Knee Airbag





Optional equipped with Rear retractor pre-tensioner



10. Explanation of pictograms used

B	Gasoline vehicle	Fuel tank content gasoline/ethanol	*	Air-conditioning component
	Corrosives	Hazardous to the human health	<u>^</u>	General warning sign
	Explosive	Acute toxicity		Flammable
☐ IR ∭	Use thermal Infrared camera	Bonnet	¥2>	Environmental hazard

ID No.	Version No.	Version date:	Page
KNA-JA1-RS-I-1-202404	01	2024	4 of 4